

Tools Needed:

Screw Driver



You may also need:



Assembly - Step 1:




Fasten Mobile D-Rings to D-Ring Blank using 8-32 Screws. Secure with screw driver.

Included:


(1x) D-Ring Blank



(16x) Cable Minder Clip

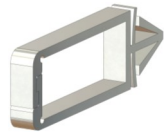


(5x) Mobile D-Ring

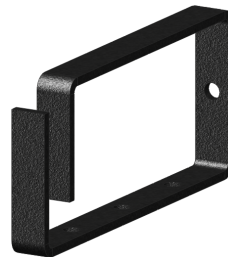

(5x) 8-32 D-Ring Screw



Assembly - Step 2:

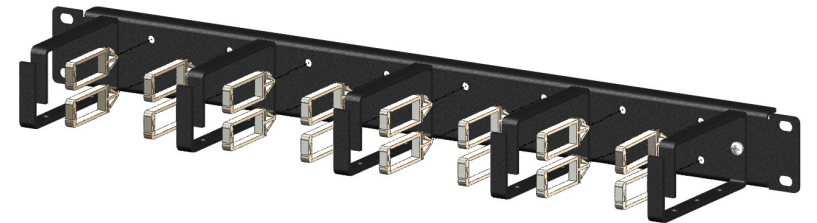

Install Cable Minder Clips by inserting into holes as shown.

2

3